



RACEFACE

HANDLE BAR INSTALLATION

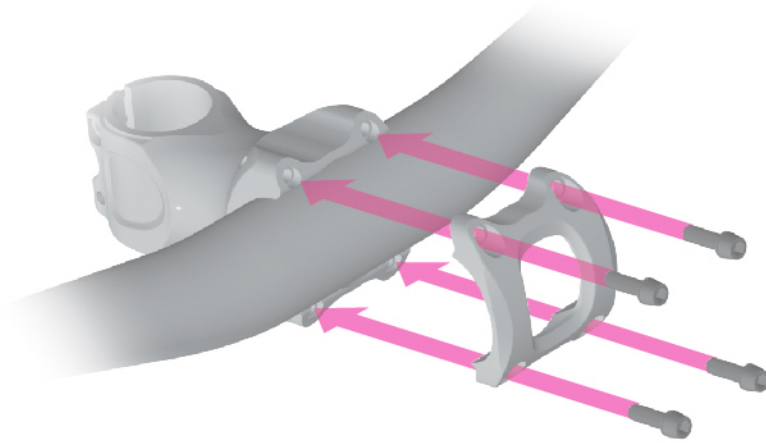

THREAD
Einschrauben
Enroscar
Visser

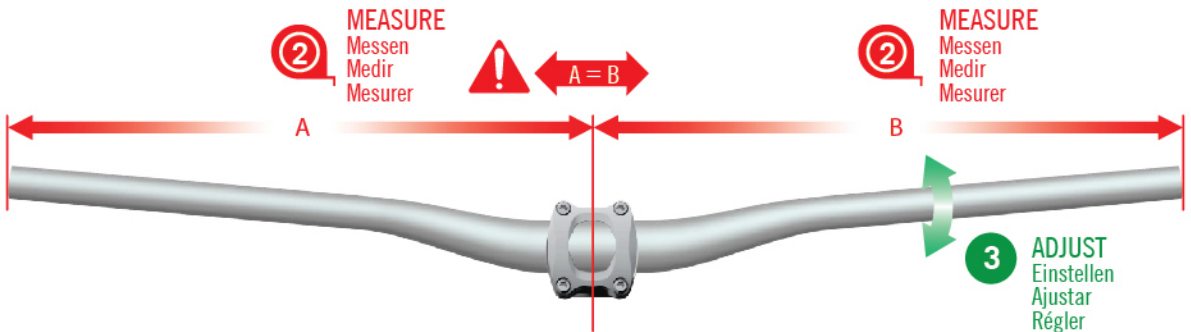

②

MEASURE
Messen
Medir
Mesurer




$A = B$

②

MEASURE
Messen
Medir
Mesurer

③

ADJUST
Einstellen
Ajustar
Régler

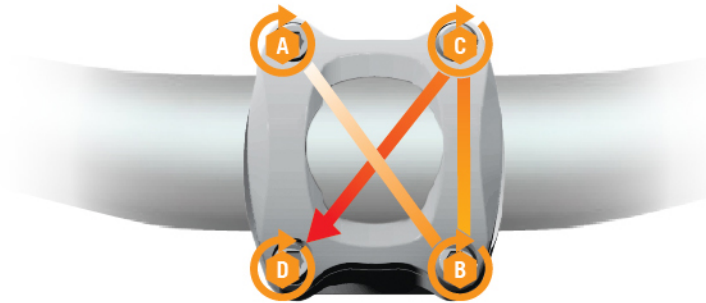

TORQUE TO STEM SPECIFICATIONS



THREAD
Einschrauben
Enroscar
Visser



MEASURE
Messen
Medir
Mesurer



ADJUST
Einstellen
Ajustar
Régler



TORQUE
Anziehmome
Apretar
Serrer