


# ROCKY MOUNTAIN®

## SOLO CARBON & ALLOY

### GEOMETRIE

<b>TTH</b>	Oberrohr (mm)
<b>HTA</b>	Lenkwinkel (Grad)
<b>HTL</b>	Steuerrohr (mm)
<b>STA</b>	Sitzwinkel (Grad)
<b>STL</b>	Sitzrohr (mm)
<b>RC</b>	Kettenstrebe (mm)
<b>BBD</b>	Tretlagerabsenkung (mm)
<b>R</b>	Reach (mm)
<b>S</b>	Stack (mm)
<b>SH</b>	Schritthöhe (mm)
<b>WB</b>	Radstand (mm)

\* Wir messen die Schrittlänge 200 mm vor der Mitte des Tretlagers.

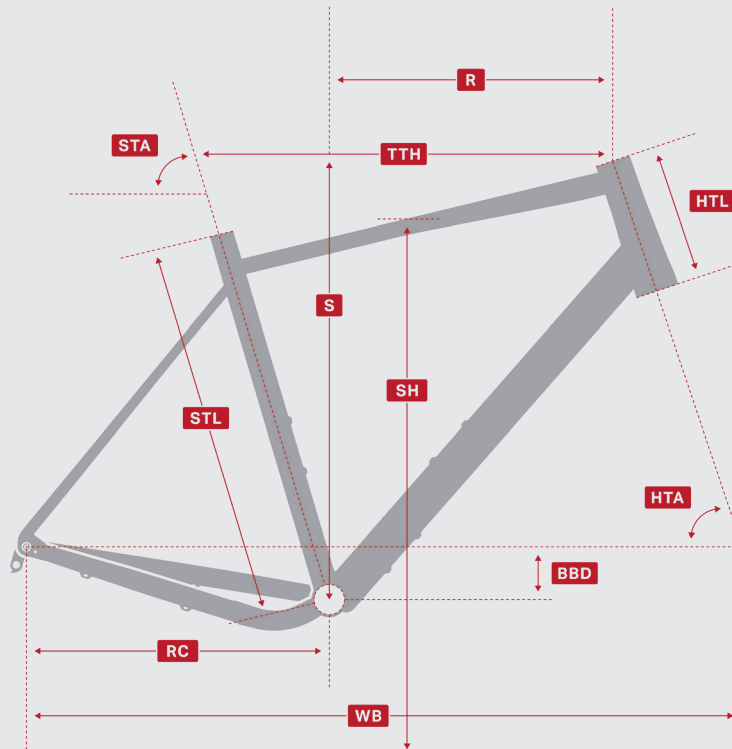

	<b>XS</b>	<b>SM</b>	<b>MD</b>	<b>LG</b>	<b>XL</b>
<b>TTH</b>	520	540	560	580	605
<b>HTA</b>	70°	70.5°	71°	71.5°	71.5°
<b>HTL</b>	100	130	150	185	210
<b>STA</b>	75°	74.5°	74°	73.5°	73°
<b>STL</b>	414	452	490	528	566
<b>RC</b>	425	425	425	425	425
<b>BBD</b>	78	77	75	75	75
<b>R</b>	376	383	392	396	408
<b>S</b>	538	567	586	621	645
<b>SH</b>	755	787	814	850	877
<b>WB</b>	1021	1034	1046	1056	1076